

Acer Extensa 2509 Keyboard Matrix with row and column FPC pin numbers shown.

	19	20	21	22	23	24	25	26
<b>1</b>	<b>Fn</b>							
<b>2</b>	Esc	F1	`	Tab	Caps	A		1
<b>3</b>		<b>SHIFT-L</b>			<b>SHIFT-R</b>			
<b>4</b>			<b>CTRL-L</b>					<b>CTRL-R</b>
<b>5</b>				<b>GUI</b>				Menu
<b>6</b>	F3	F2	2	W	S	X	Z	Q
<b>7</b>						<b>ALT-L</b>	<b>ALT-R</b>	
<b>8</b>	F5	F4	4	E	D	C		3
<b>9</b>	F6	6	5	R	G	F	V	T
<b>10</b>	F7	8	7	Y	H	N	B	U
<b>11</b>	F9	F8	I	K	M	,	Space	J
<b>12</b>	Pad 8	Pad -	Pad 7	Pad *				Insert
<b>13</b>	F10	9	O	L		.	Quote	P
<b>14</b>	F11	F12	0	[		/		Minus
<b>15</b>	NumL				Up	Page Dn	Left	]
<b>16</b>	End	Pause	BS	Enter	\	;	Down	Right
<b>17</b>	Pad /	Pad +	Pad 4	Pad 0	Home	Pad 9	Del	Pad 3
<b>18</b>	Pad Ent	Pad 1	Pad 2		Pad .	Page Up	Pad 6	Pad 5

## The Acer Extensa 2509 keyboard layout



Media keys accessed with Fn modifier key:

Play/Pause under the Home key

Stop under the Page Up key

Rewind under Page Down key

Fast forward under the End key

Volume up under the Up arrow key

Volume down under the Down arrow key

Part numbers on laptop backside



Keyboard part numbers. Sunrex V121702AS4 UI

